


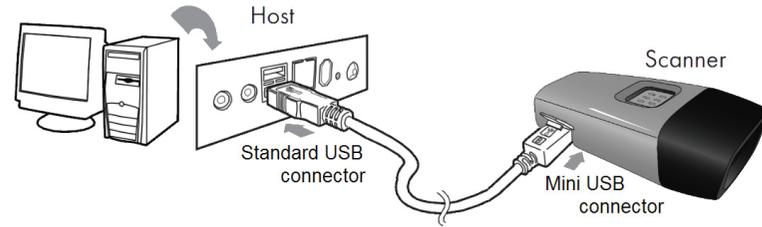

STEP 1: CONNECT AND CHARGE

1. Flip the rubber cover up to expose the micro USB port on the scanner.
2. Plug the micro USB cable into the port on the scanner and into a free USB port of a host computer.
3. Charge for at least 5 hours.



STEP 2: BEGIN PAIRING

Scan the top barcode, then the bottom barcode to begin the pairing process.



Default



Disconnect

STEP 3: ENABLE BLUETOOTH ON HOST

Go to your device (phone/tablet/computer) settings and turn on the Bluetooth function.

The MS912+ will appear on your device as "Wireless Scanner" or simply "Wireless"

Select/Press "Wireless Scanner"

If you have Bluetooth 2.1, "Wireless Scanner" will now appear as paired. Your device is now paired with the MS912+.

If your device does not pair automatically continue to Step 4

STEP 4: HID MODE

Scan here to continue the pairing process between your mobile device and the MS912+.



Bluetooth: HID Mode

**Note:* The following instructions will pair via HID mode. If you require SPP pairing, please refer to the User's Manual or contact the Unitech Support Team.

STEP 5: FINISH PAIRING

The MS912+ will appear on your device as "Wireless Scanner," "Wireless Keyboard," or simply "Wireless"

Select/Press "Wireless Scanner"

Your device is now paired with the MS912+.

If prompted to enter a pincode to finish the pairing process, proceed to Steps 6-8

STEP 6: PINCODE START

Scan here to indicate the beginning of the pincode sequence.



Pincode Start

STEP 7: SCAN IN YOUR PINCODE

Scan the pincode sequence provided by your device using these barcodes.



0



1



2



3



4



5



6



7



8



9

STEP 8: PINCODE STOP

Scan to indicate the end of the pincode sequence.



Enter

Scan to submit the pincode sequence. Your host device should now be paired with the MS912+.



Pincode Stop

STEP 1: SWITCH TO BATCH MODE

Scan here to switch from Bluetooth Mode to Batch Mode. Data will now be stored in the internal memory of the MS912M+ and the MS912M+ will no longer transmit data via Bluetooth.



Batch Mode

STEP 2: SCAN YOUR DESIRED BARCODES

You may now scan your desired barcodes.

By default, each barcode scanned will be stored in the following format:
< Date >, < Time >, < Barcode Data >

To change data format, please refer to the "DATA FORMAT" chapter in quick guide.

STEP 3: CONNECT THE MS912M+ TO PC

Please connect the scanner to the host with mini USB cable, then access removable storage device "MiniScan" from which you may open or copy the file "BARCODE.txt" to your computer.

STEP 4: UTILIZE BARCODE DATA BY EXCEL

Follow below steps to utilize barcode data by Excel:

1. Launch Excel first
2. Click File, click Open, then locate "BARCODE.txt"
3. In the Text Import Wizard (Step 1 of 3), choose Delimited, and click Next.
4. In the Text Import Wizard (Step 2 of 3), select Comma, and click Next.
5. In the Text Import Wizard (Step 3 of 3), simply click Finish.
6. The barcode data will appear in the form of an Excel spreadsheet, with all the commas replaced by field separators.

STEP 5: DELETE LAST DATA

To delete last stored data, please scan below barcode. Stored barcode data will be deleted one by one with each scan on below barcode.



Delete Last Data

STEP 6: CLEAR ALL DATA

To delete ALL stored data, simply delete the file "BARCODE.txt" in the removable storage device "MiniScan" until you hear two beeps.

KEYBOARD TOGGLE FOR IPHONES

You can bring up the keyboard on Apple iPhones using the MS912+.

Simply double tap the scan button on your MS912+.

Double tap the scan button once again to hide the keyboard.

HOW CAN WE HELP YOU?

Unitech's professional support team is available to quickly answer questions or technical-related issues. Should equipment or configuration issues occur, please contact your regional Unitech office and one of our Support Engineers will be happy to assist you.

For additional configuration options please refer to the User's Manual and/or Scanner Configuration Manager Software on www.ute.com.

North America

Los Angeles
800-861-8648
info@us.ute.com
<http://us.ute.com>

Latin America

Mexico City
52-55-1163-8759
info@latin.ute.com
<http://latin.ute.com>

Europe / Africa

Tilburg
31-13-4609292
info@eu.ute.com
<http://eu.ute.com>

Japan

Tokyo
81-3-35232766
info@jp.ute.com
<http://jp.ute.com>

China

Shanghai
86-21-64824262
info@cn.ute.com
<http://cn.ute.com>

APAC / Middle East

Taipei
886-2-27911556
info@apac.ute.com
<http://apac.ute.com>